

CE Avionics Capabilities List by Part

PART NUMBER	MODEL	DESCRIPTION
064-1003-XX	KTR-900	COMM R/T
064-1004-XX	KTR-9000	COMM R/T
064-1005-XX	KTR-9100A	COMM R/T
064-1006-00	KTR-900A	COMM R/T
064-1009-XX	KTR-905/E	COMM R/T
064-1015-00	KTR-953	HF RECEIVER/EXC
064-1016-00	KCU-951	HF CONTROL
064-1017-XX	KAC-952	HF ANT COUPLER
064-1019-XX	KY-196/E	COMM R/T
064-1021-XX	KY-197/E	COMM R/T
064-1023-00	KTR-908	COMM R/T
064-1047-XX	VC-401B	COMM R/T
064-1053-XX	KY-197A	COMM R/T
064-1054-XX	KY-196A	COMM R/T
065-0014-XX	KSA-370	SERVO
065-0016-01	KDC-380	AIRDATA COMPUTER
065-0017-XX	KMC-340	MODE CONTROLLER
065-0018-XX	KCP-320	FLIGHT COMPUTER
065-0019-XX	KAC-325	AUTOPILOT COMPUTER
065-0020-00	KDC-381	AIRDATA COMPUTER
065-0027-XX	KS-270	SERVO
065-0028-XX	KS-271	SERVO
065-0029-XX	KS-272	SERVO
065-0030-00	KM-275	MOUNT
065-0031-XX	KM-276	MOUNT
065-0032-XX	KA-285	PANEL
065-0033-00	KC-290	CONTROLLER
065-0034-XX	KC-295	COMPUTER

PART NUMBER	MODEL	DESCRIPTION
065-0035-XX	KC-291	CONTROLLER
065-0036-XX	KC-296	YAW COMPUTER
065-0037-00	KC-292	CONTROLLER
065-0040-XX	KS-273	SERVO
065-0059-XX	KS-270A	SERVO
065-0060-XX	KS271A	SERVO
065-0061-XX	KS-272A	SERVO
065-5006-XX	KA-117	TRIM ADAPTER
065-5020-XX	KA-142	ADAPTER
066-1005-00	KGS-680	GLIDESLOPE RECEIVER
066-1006-00	KGM-690	G/S MKR RECEIVER
066-1008-00	KNR-660	NAV RECEIVER
066-1010-00	KNR-600	NAV RECEIVER
066-1011-00	KXP-750	TRANSPONDER
066-1016-XX	KDF-800	ADF RECEIVER
066-1019-XX	KDM-7000	DME R/T
066-1021-XX	KR-21	MARKER RECEIVER
066-1022-01	KDF-8000	ADF RECEIVER
066-1023-00	KR-85	ADF RECEIVER
066-1024-XX	KMA-20	AUDIO MARKER
066-1025-XX	KXP-750A	TRANSPONDER
066-1026-XX	KNR-600A	NAV RECEIVER
066-1027-00	KNR-660A	NAV RECEIVER
066-1029-XX	KN-65/A	DME R/T
066-1030-00	KNR-601	NAV RECEIVER
066-1031-00	KNR-661	NAV RECEIVER
066-1033-00	KN-73	G/S RECEIVER
066-1034-XX	KT-78	TRANSPONDER
066-1034-XX	KT-76	TRANSPONDER
066-1035-XX	KGM-691	GLIDESLOPE / MKR

PART NUMBER	MODEL	DESCRIPTION
066-1036-00	KGS-681	GLIDESLOPE RECEIVER
066-1037-XX	KDM-705/A	DME R/T
066-1038-00	KR-86	ADF RECEIVER
066-1041-00	KXP-755	TRANSPONDER
066-1043-XX	KNR-615	NAV RECEIVER
066-1044-00	KMR-675	MARKER RECEIVER
066-1046-00	KDA-335	DISPLAY ADAPTER
066-1047-00	KDF-805	ADF RECEIVER
066-1048-XX	KRA-405	RADIO ALTIMETER R/T
066-1053-00	KT-79	TRANSPONDER
066-1055-XX	KMA-24/H	AUDIO PANEL / MKR
066-1062-00	KT-76A	TRANSPONDER
066-1062-XX	KT-78A	TRANSPONDER
066-1063-00	KN-75	GLIDESLOPE RECEIVER
066-1064-00	KN-62	DME R/T
066-1066-XX	KDM-706/A	DME R/T
066-1067-00	KN-53	NAV RECEIVER
066-1068-XX	KN-62A	DME R/T
066-1069-XX	KDI-572	DME INDICATOR
066-1069-XX	KDI-573	DME INDICATOR
066-1069-XX	KDI-574	DME INDICATOR
066-1070-XX	KN-63	DME R/T
066-1071-XX	KXP-756	TRANSPONDER
066-1072-XX	KR-87	ADF RECEIVER
066-1077-XX	KDF-806	ADF RECEIVER
066-1078-XX	KNR-634 /A	NAV RECEIVER
066-1088-XX	KN-64	DME R/T
066-1091-00	KDI-573B	DME INDICATOR
066-1101-XX	VN-411B	NAV RECEIVER
066-1103-XX	TR-421B	TRANSPONDER

PART NUMBER	MODEL	DESCRIPTION
066-1104-XX	DF-431()	ADF RECEIVER
066-1105-XX	DF-431()	ADF RECEIVER
066-1107-XX	DM-441B	DME R/T
066-1153-0101	KRA-406B	RADIO ALTIMETER R/T
066-3003-XX	KDI-570	DME INDICATOR
066-3008-02	KI-201C	NAV INDICATOR
066-3012-XX	KA-35	LIGHT ASSY MKR
066-3014-XX	KNI-585	ADF INDICATOR
066-3014-XX	KNI-580	ADF INDICATOR
066-3017-XX	KI-225	ADF INDICATOR
066-3018-00	KI-265	DME INDICATOR
066-3021-00	KI-226	RMI
066-3022-XX	KVN-395	VNAV COMPUTER
066-3025-00	KI-213	NAV INDICATOR
066-3025-XX	KI-214	NAV INDICATOR
066-3026-00	KI-240	RADAR INDICATOR
066-3029-XX	KI-525	HSI
066-3031-XX	KNI-415	RAD ALT INDICATOR
066-3032-XX	KDI-570	DME INDICATOR
066-3032-XX	KDI-571	DME INDICATOR
066-3034-00	KNI-416	RAD ALT INDICATOR
066-3034-03	KNI-416	RAD ALT INDICATOR
066-3034-XX	KI-204	NAV INDICATOR
066-3034-XX	KI-207	NAV INDICATOR
066-3034-XX	KI-203	NAV INDICATOR
066-3034-XX	KI-206	NAV INDICATOR
066-3034-XX	KI-202	NAV INDICATOR
066-3037-00	KI-261	DME INDICATOR
066-3038-00	KI-229	RMI
066-3039-00	KI-205	NAV INDICATOR

PART NUMBER	MODEL	DESCRIPTION
066-3042-XX	KNI-581	RMI INDICATOR
066-3044-00	KNI-416	RAD ALT INDICATOR
066-3046-XX	KI-525A	HSI
066-3047-XX	KI-266	DME INDICATOR
066-3052-00	KI-267	DME INDICATOR
066-3056-XX	KI-209	NAV INDICATOR
066-3056-XX	KI-208	NAV INDICATOR
066-3057-XX	KDM-7000B	DME R/T
066-3059-XX	KI-228	ADF INDICATOR
066-3060-XX	KNI-582	RMI INDICATOR
066-3063-XX	KI-227	ADF INDICATOR
066-3076-XX	KI-248	RADAR INDICATOR
066-3084-00	IN-182A	RADAR INDICATOR
066-3114-XX	IN-812A	RADAR INDICATOR
066-4002-XX	KNC-610	R-NAV COMPUTER
066-4003-00	KN-74	R-NAV COMPUTER
066-4004-00	KN-77	CONVERTER
066-4005-00	KCU-565A	NAV DISPLAY KNR
066-4006-XX	KNR-665	NAV / RNAV
066-4007-00	KNR-630	NAV RECEIVER
066-4007-01	KNR-631	NAV RECEIVER
066-4007-02	KNR-632	NAV RECEIVER
066-4007-03	KNR-633	NAV RECEIVER
066-4008-XX	KNS-80	R-NAV
066-4009-00	KN-72	CONVERTER
066-4010-00	KNR 665A	NAV RNAV/COV/GS
069-1010-00	KI-212	NAV INDICATOR
069-1010-04	KI-211C	NAV INDICATOR
069-1014-00	KX-170	NAV/COMM
069-1016-00	KX-175	NAV/COMM

PART NUMBER	MODEL	DESCRIPTION
069-1017-00	KX-170A	NAV/COMM
069-1019-XX	KX -175B	NAV/COMM
069-1020-00	KX-170B	NAV/COMM
069-1021-XX	KY-195/B	COMM R/T
069-1022-00	KX-145	NAV /COMM
069-1024-XX	KX-155	NAV/COMM
069-1025-XX	KX-165	NAV/COMM
071-0003-00	KA-40	MARKER LIGHT ASSY
071-0004-00	KA-43	CONVERTER
071-0006-00	KA-47	DME CODE CONVERTER
071-0016-00	KA-58	A/P ADAPTER
071-1010-00	KNR-600	NAV RECEIVER
071-1012-XX	KFS-590A/B	COMM CONTROL
071-1013-XX	KFS-560	NAV CONTROL
071-1014-XX	KFS-570	ATC CONTROL
071-1033-00	KFS-580	ADF CONTROL
071-1034-00	KA-36	LOOP ANTENNA
071-1035-XX	KMT-110	FLUX VALVE
071-1038-00	KFS-575	ATC CONTROL
071-1041-01	KA-39	POWER CONVERTER
071-1043-XX	KFS-570A	ATC CONTROL
071-1051-XX	KA-49	RADAR ANTENNA
071-1052-00	KMT-112	FLUX VALVE
071-1053-XX	KA-51A	SLAVE ACCESSORY
071-1054-XX	KFS-560B	NAV CONTROL
071-1060-XX	KCU-561	NAV CONTROL
071-1061-XX	KCU-578	DISPLAY ADF/ATC
071-1062-XX	KCU-591	HF CONTROL
071-1066-XX	KFS-580B	ADF CONTROL
071-1067-XX	KFS-585B	ADF CONTROL

PART NUMBER	MODEL	DESCRIPTION
071-1069-XX	KCU-582	ADF CONTROL
071-1072-XX	KDE-566	DATA LOADER
071-1074-00	KDA-696	BATTERY PACK
071-1076-00	KDA-697	RMI CONVERTER
071-1085-00	KA-122	DME HOLD ADAPTER
071-1087-XX	KA-119	AUDIO CONTROL
071-1098-00	KA-42A	ADF ANTENNA
071-1133-00	KA-42B	ADF ANTENNA
071-1143-00	KDA-698	MEMORY TIMER
071-1148-00	KA-135	MATCHING ASSY
071-1192-XX	KFS-576	ATC CONTROL
071-1196-00	KA-44	ADF ANTENNA
071-1210-XX	KFS-586/A	ADF CONTROL
071-1215-XX	KFS-598	COMM CONTROL
071-1216-XX	KFS-564	NAV CONTROL
071-1220-XX	KA-126	RADAR R/T
071-1234-00	KA-44B	ADF ANTENNA
071-1242-XX	KA-51B	SLAVE ACCESSORY
071-1268-XX	KA-594	ADAPTER
071-1274-XX	KFS-594	HF CONTROL
071-1282-XX	KFS-598A	COMM CONTROL
071-1283-XX	KFS-564A	NAV CONTROL
071-1284-XX	KFS-586	ADF CONTROL
071-1285-XX	KA-128	RADAR ART
071-1341-XX	CD-402B	CONTROL
071-1343-XX	CD-412B	CONTROL
071-1345-XX	CD-422B	CONTROL
071-1347-XX	CD-432B	ADF CONTROL
071-1350-XX	SD-442B	DME CONTROL
071-1370-00	RS 811A	RADAR ART

PART NUMBER	MODEL	DESCRIPTION
071-1377-XX	CD-413B	NAV CONTROL
071-1378-00	RS-811A	RADAR ART
071-1503-04	KA-51A	SLAVING SWITCH
071-2003-00	KA-445	AUDIO CENTER
071-2006-XX	KA-37	AUDIO CONTROL PANEL
071-2007-XX	KA-455	AUDIO CENTER
071-2009-02	KA-134	AUDIO CONTROL
097768-0101	1014A	TRANSPONDER
097768-0201	1014B	TRANSPONDER
1880758-2	FGS-70	MOTOR SPEED CONTROLLER
1954492-X	FGS-70	COMMAND COMPUTER
1954493-X	FGS-70	CONTROL COMPUTER
1975548-X	FGS-70	MODE CONTROLLER
1975549-X	FGS-70	AUTOPILOT CONTROLLER
1U008-04	3014D	TRIM SERVO
1U008-05	3014F	TRIM SERVO
1U008-06	3014G	TRIM SERVO
1U008-08	3014H	TRIM SERVO
1U009-05	1V009-05	COMPUTER SHOCKMOUNT
1U014-04	3013H	SERVO
1U014-05	3013J	SERVO
1U016-02	6744A-1	ADAPTOR
1U030-05	5487C-1	FLIGHT CONTROLLER
1U030-06	5487D-1	FLIGHT CONTROLLER
1U030-07	5487D-1	FLIGHT CONTROLLER
1U030-08	5487F-1	FLIGHT CONTROLLER
1U030-09	5487C-2	FLIGHT CONTROLLER
1U030-10	5487C-2	FLIGHT CONTROLLER
1U030-11	5487D-2	FLIGHT CONTROLLER
1U030-12	5487F-2	FLIGHT CONTROLLER

PART NUMBER	MODEL	DESCRIPTION
1U043-01	4090A	INDICATOR
1U088-XX	5536E	COMPUTER
1U096-01	5489A	SWITCH
1U096993-10	2203J	ALTITUDE CONTROLLER
2087827-XXXX	TRA-61A	TRANSPONDER
2087948-XXXX	TRA-61AL	TRANSPONDER
229-9015-010	590A-6	ALTITUDE CONTROL
270-0859-010	590A-6A	ALTITUDE CONTROL
270-2436-XXX	613L-3	ATC CONTROL
300-2084-XX	KM-277	MOUNT
321-112-45-000	Y-SERIES	CONTROL
35070-XXXX	PA-500A	ACTUATOR
3614001-XXXX	VC-401B	COMM R/T
3614004-XXXX	VN-411B	NAV RECEIVER
3614009-4201	TR-421B	TRANSPONDER
3614019-XXXX	DM-441B	DME R/T
37960-1120	C-530A	CONTRL UNIT
38100-XXXX	PA-520A	TRIM ACTUATOR
400-0018-2	C-114	CONTROL
400-0019-XXX	HH-114	HANDSET
400-0028-000	C-115	COCKPIT CONTROL
400-0030-XXX	WH-18	HANDSET
400-0031-XXX	HH-118	FLITE PHONE CONTROL
400-0032-XXX	C-118	CABIN CONTROL
400-0033-XXX	RT-18A	FLITE PHONE R/T
400-0038-001	C-117-6	CONTROL
400-0039-000	C-119	CONTROL
400-0041-000	C-120-6	CONTROL
400-0044-000	WT-200	COMM R/T
400-0050-000	WT-2000	COMM R/T

PART NUMBER	MODEL	DESCRIPTION
400-0093-XXX	WH-4	CABIN CONTROL
400-0107-XXX	WT-200B	COMM R/T
400-0122-XXX	WH-6	FLITEFONE CONTROL
400-0123-XXX	WH-10	FLITEFONE CONTROL
400-0124-XXX	C-118D	FLITEFONE CONTROL
400-0125-XXX	RT-18D	FLITEFONE R/T
400-0138-XXX	C-118E	FLITEFONE CONTROL
4000186-8502	AC-844B	ALTITUDE CONTROLLER
4000191-8501	FX-833A	FLUX SENSOR
4000191-8502	FX-833A	FLUX SENSOR
4000192-8501	IN-835A	SLAVING METER
4000202-8501	EC-834A	ERROR CORRECTOR
4000225-8502	2203J	ALTITUDE CONTROLLER
4000256-XXXX	FC-813()	FLIGHT CONTROLLER
4000288-XXXX	CA-814()	COMPUTER
4000289-XXXX	PS815()	POWER SUPPLY
4000290-XXXX	SA-816()	ROLL SERVO
4000293-XXXX	PS-819()	ADAPTER
4000315-XXXX	FC-823()	CONTROLLER
4000368-XXXX	AD-816A	ADAPTER
4000493-8501	5487G	FLIGHT CONTROL
4000494-8501	5486A	MODE SELECTOR
4000495-8501	5536F	COMPUTER
4000502-0101	RT-1201A	RADAR R/T
4000503-XXXX	IN-1202A	RADAR INDICATOR
4000504-XXXX	DA-1203A	RADAR ANTENNA
4000507-8501	5485A	FLIGHT CONTROL
4000523-8501	3013H	SERVO
4000524-8505	3014D-2	TRIM SERVO
4000524-8506	3014F-2	TRIM SERVO

PART NUMBER	MODEL	DESCRIPTION
4000524-8507	3014G-2	TRIM SERVO
4000524-8508	3014H-2	TRIM SERVO
4000524-8509	3014J-2	TRIM SERVO
4000524-8510	3014K-2	TRIM SERVO
4000524-8511	3014L-2	TRIM SERVO
4000526-XXXX	TR-661A	TRANSPONDERS
4000589-5401	AD-854A	TRIM ADAPTER
4000654-XXXX	AT-143A	RADAR ANTENNA
4000763-3101	RT-131A	RADAR R/T
4000764-XXXX	IN-132A	RADAR INDICATOR
4000765-XXXX	AT-133A	PARABOLIC ANT
4000790-XXXX	DA-144A	RADAR ANTENNA
4000831-XXXX	RT-1401()	RADAR R/T
4000833-XXXX	IN-1402()	RADAR INDICATOR
4000875-XXXX	SC-833A	SLAVING CONTROL
4000918-XXXX	ST-873()	TRIM SERVO
4000946-XXXX	IN-152A	RADAR INDICATOR
4000964-XXXX	IN-1102A	RADAR INDICATOR
4000965-XXXX	IN-1302()	RADAR INDICATOR
4000966-XXXX	RT 1301()	RADAR R/T
4000976-XXXX	MA-872A	MODE ANNUNCIATOR
4000977-7203	FC-872A	FLIGHT CONTROLLER
4000978-XXXX	SA-873()	ROLL SERVO
4000980-XXXX	SR-874()	YAW SERVO
4001018-XXXX	ART-161A	RADAR ANT/RT
4001057-6601	TR-2061A	TRANSPONDER
4001098-XXXX	IN-1202B	RADAR INDICATOR
4001291-XXXX	IN-2021A	RADAR INDICATOR
4001294-XXXX	IN-2026A	RADAR INDICATOR
4001295-XXXX	IN-2027A	RADAR INDICATOR

PART NUMBER	MODEL	DESCRIPTION
4001373-XXXX	IN-2022A	RADAR INDICATOR
4001533-0201	FC-8702A	FLIGHT CONTROLLER
4001538-0401	CV-8704A	COMPUTER
4001539-0501	PT-8705A	TRANSDUCER
4001670-XXXX	IN-2025()	RADAR INDICATOR
4001845-XXXX	ART-231A	RDR ART
4001846-XXXX	INA-232A	RADAR INDICATOR
4001921-5101	RT-1151A	RADAR R/T
4001922-XXXX	IN-1152A	RADAR INDICATOR
4001948-XXXX	IN-1152B	RADAR INDICATOR
4004437-901	RT-220	RADIO ALTIMETER R/T
4004437-902	RT-221	RADIO ALTIMETER R/T
4004444-901	RA-210	RADIO ALTIMETER IND
4006451-0501	2268A-1	CAPSTAN
4007263-05XX	4007263-05XX	CALIBRATION BOARD
4007339-901	RA-220	RADIO ALTIMETER IND
4007339-902	RA-230	RADIO ALTIMETER IND
4008519-811	SP200	AUTOPILOT COMPUTER
4008519-820	SP200	AUTOPILOT COMPUTER
4008519-841	SP200	AUTOPILOT COMPUTER
4008519-911	SP200	AUTOPILOT COMPUTER
4008519-920	SP200	AUTOPILOT COMPUTER
4008519-941	SP200	AUTOPILOT COMPUTER
4009506-8501	3013J	SERVO
4009506-8502	3013K	SERVO
400965-0204	IN-1302A	RADAR INDICATOR
4014267-901	RA-215	RADIO ALTIMETER IND
4018368-XXX	MS500	MODE SELECTOR
4018369-901	FZ500	FLIGHT COMPUTER
4018369-902	FX500	FLIGHT COMPUTER

PART NUMBER	MODEL	DESCRIPTION
4018369-904	FZ500	FLIGHT COMPUTER
4018369-905	FZ500	FLIGHT COMPUTER
4018369-907	FZ500	FLIGHT COMPUTER
4018369-911	FZ500	FLIGHT COMPUTER
4018639-XXX	PC500	AUTOPILOT CONTROLLER
41090-1128	C-531A	CONTROL UNIT
41110-XXXX	S-530A	MODE SELECTOR
41120-XXXX	CA-530A/FD	COMPUTER AMPLIFIER
41780-XXXX	C-830FD	CONTROL UNIT
4-2020SA10-XX	FC-110()	YAW CALIBRATION BOARD
4-2020SA12-XX	FC-110()	SERVO AMP BOARD
4-2020SA13-XX	FC-110()	LATERAL COUPLER SIGNAL BD
4-2020SA14-XX	FC-110()	LATERAL COUPLER LOGIC BD
4-2020SA15-XX	FC-110()	LONGITUDINAL COUPLER BD
4-2020SA16-XX	FC-110()	TRIM COUPLER BD
4-2020SA8-XX	FC-110()	PITCH CALIBRATION BOARD
4-2020SA9-XX	FC-110()	ROLL CALIBRATION BOARD
4-2020-XX	FC-110()	AUTOPILOT COMPUTER
4-2020-XXX	FC-110()	AUTOPILOT COMPUTER
42710-0000	S-550A	MODE SELECTOR
42860-XXXX	CA-550A/FD	AUTOPILOT AMPLIFIER
44400-XXXX	AS-895A	ALTITUDE SENSOR
44430-2825	TA-495A	TRIM ACTUATOR
45850-XXXX	PA-495-X	ACTUATOR
46210-XXXX	CA-1050A/FD	COMPUTER AMPLIFIER
46220-XXXX	PA-1050A	ACTUATOR
46240-0000	C-1050A	CONTROL UNIT
46250-0001	AC-1050A	AIR DATA UNIT
46260-0000	S-1050A	MODE SELECTOR
48110-XXXX	S-1050A-1	MODE SELECTOR

PART NUMBER	MODEL	DESCRIPTION
501-1075-XX	PS-823()	EMERGENCY POWER SUPPLY
501-10XX-XX	AC-111	AUTOPILOT CONTROLLER
501-1107-XX	AC-200()	AUTOPILOT CONTROLLER
501-1108-XX	CA-200()	AUTOPILOT COMPUTER
501-1228-XX	PS-835()	EMERGENCY POWER SUPPLY
501-1254-XX	AC-111()	AUTOPILOT CONTROLLER
501-1256-XX	AC-200()	AUTOPILOT CONTROLLER
522-0710-XXX	614E-10()	MODE SELECTOR
522-0875-006	346D-1	ADDRESS AMP
522-0881-004	356F-1	SPEAKR AMP
522-1230-XXX	618T-X	HF R/T
522-1400-000	341C-1	SERVO AMP
522-1660-XXX	618T-3	HF TRANSCEIVER
522-1836-XXX	51Y-4(x)	ADF RECEIVER
522-1837-000	137A-5	ADF ANTENNA
522-1859-XXX	339D-1	DME INDICATOR
522-2357-XXX	614L-8	CONTROL
522-2446-XXX	313N-1	CONTROL
522-2447-XXX	313N-2/2D	RADIO CONTROL
522-2448-XXX	313N-3/3D	DUAL CONTROL
522-2449-XXX	313N-4	COMM CONTROL
522-2450-XXX	51RV-1	NAV RECEIVER
522-2466-004	618M-1	COMM R/T
522-2514-003	356C-2	AMP
522-2587-XXX	51Y-4A	ADF RECEIVER
522-2599-XXX	313N-5	CONTROL
522-2600-XXX	313N-6/6B	CONTROL
522-2604-XXX	339D-1A	DME INDICATOR
522-2644-XXX	51Z-4	MKR RECEIVER
522-2702-XXX	860-E2	DME R/T

PART NUMBER	MODEL	DESCRIPTION
522-2703-XXX	621-A3	TRANSPONDER
522-2754-XXX	618M-1()	COMM R/T
522-2866-XXX	356C-4	ISOLATION AMP
522-2899-000	387C-4	AUDIO CONTROL
522-2901-XXX	APC-80	AUTOPILOT AMPLIFIER
522-2904-000	356C-5	AUDIO COMPENSATOR
522-2919-XXX	339D-3B	DME INDICATOR
522-2929-XXX	339D-3C	DME INDICATOR
522-2993-XXX	51R-7A	NAV RECEIVER
522-2996-XXX	51Z-4	MARKER RECEIVER
522-3132-004	618M-1D	COMM R/T
522-3343-XXX	339D-3D	INDICATOR
522-3467-XXX	51R-8A	NAV RECEIVER
522-3551-XXX	614E-4	AUTOPILOT CONTROLLER
522-3613-000	313N-4A	CONTROL
522-3614-000	313N-4B	CONTROL
522-3615-XXX	313N-4BA	CONTROL
522-3616-XXX	313N-4C	CONTROL
522-3616-XXX	313N-4D	CONTROL
522-3617-XXX	313N-5A	CONTROL
522-3690-XXX	313N-6C	CONTROL
522-3698-XXX	860-F1	RADIO ALTIMETER R/T
522-3763-XXX	346-B3	AUDIO AMP
522-3866-XXX	344C-1G	INSTRUMENT AMPLIFIER
522-3948-XXX	54W-1C	COMPARATOR WARNING MONITOR
522-3949-XXX	54W-1D	COMPARATOR WARNING MONITOR
522-4088-XXX	618M- 2B	COMM R/T
522-4089-XXX	618M-2D	COMM R/T
522-4114-XXX	339H-1	INDICATOR
522-4209-XXX	860E- 3	DME R/T

PART NUMBER	MODEL	DESCRIPTION
522-4280-XXX	51RV-2B	NAV RECEIVER
522-4353-001	346D-1A	AUDIO AMP
522-4354-002	339H-1A	RADIO ALTIMETER INDICATOR
522-4363-XXX	339H-1B	RADIO ALTIMETER INDICATOR
522-4366-101	51RV-1A	NAV RECEIVER
522-4408-XXX	313N-6F	CONTROL
522-4501-XXX	51RV-1C	NAV RECEIVER
522-4504-001	339H-1C	RADIO ALTIMETER INDICATOR
522-4538-XXX	346D-1B	AUDIO AMP
522-4625-001	339H-1D	RADIO ALTIMETER INDICATOR
522-4825-XXX	339H-2	RADIO ALTIMETER INDICATOR
522-4828-XXX	618T-1B	HF R/T
522-4830-XXX	618T-3B	HF R/T
522-4945-001	323A-2G	FLUX VALVE
522-4977-XXX	51RV-2B	NAV RECEIVER
542-1071	FC-110	TRIM DISCONNECT BOARD
6097573-XXX	814B	TRANSPONDER
6097637-301	914B	TRANSPONDER
6097768-01XX	1014A	TRANSPONDER
6097768-02XX	1014B	TRANSPONDER
6097768-200	TP 114B	TRANSPONDER
622-0141-XXX	APP-80	AUTOPILOT CONTROL
622-0171-XXX	339H-3	RADIO ALTIMETER INDICATOR
622-0210-XXX	614E-23G	MODE COUPLER
622-0283-XXX	161F-1B	AIRDATA COUPLER
622-0410-001	860F-2	RADIO ALTIMETER R/T
622-0555-XXX	332C -10	RMI
622-0876-XXX	VIR-30A	NAV RECEIVER
622-0877-XXX	VIR-30M	NAV RECEIVER
622-0938-001	161F-1C	AIRDATA COUPLER

PART NUMBER	MODEL	DESCRIPTION
622-0964-XXX	344C-9	SERVO
622-0966-XXX	913K-1	AUTOPILOT COMPUTER/CONTROL
622-1036-001	161H-1	GAIN PROGRAMMER
622-1038-001	339H-1L	RADIO ALTIMETER INDICATOR
622-1116-XXX	562C-5B	AUTOPILOT AMPLIFIER
622-1181-XXX	618M-3	COMM R/T
622-1204-XXX	339H-4	RADIO ALTIMETER INDICATOR
622-1205-XXX	339H-4A	RADIO ALTIMETER INDICATOR
622-1233-XXX	DME-40	DME R/T
622-1234-XXX	339F-12	DME INDICATOR
622-1239-XXX	VIR-31A	NAV RECEIVER
622-1270-001	TDR-90	TRANSPONDER
622-1281-XXX	562C-5C	AUTOPILOT AMPLIFIER
622-1314-XXX	VHF-20B	COMM R/T
622-1396-XXX	618M-3A	COMM R/T
622-1522-XXX	562C-13	AUTOPILOT AMPLIFIER
622-1523-XXX	614E-38	MODE SELECTOR
622-1879-XXX	VHF-20A	COMM R/T
622-2012-XXX	339F-12A	DME INDICATOR
622-2078-XXX	VHF-251	COMM R/T
622-2079-XXX	VHF-250	COMM R/T
622-2080-XXX	VIR-351	NAV RECEIVER
622-2081-XXX	VIR-350	NAV RECEIVER
622-2082-XXX	IND-350	NAV INDICATOR
622-2083-XXX	IND-351	NAV INDICATOR
622-2084-001	GLS-350	G/S RECEIVER
622-2085-001	MKR-350	MARKER RECEIVER
622-2086-001	MKL-350	MARKER RECEIVER
622-2087-XXX	AMR-350	AMP
622-2088-XXX	AUD-250	AMP

PART NUMBER	MODEL	DESCRIPTION
622-2091-001	RCR-650	ADF RECEIVER
622-2092-XXX	TDR-950	TRANSPONDER
622-2093-001	PWC-150	POWER CONVERTER
622-2175-XXX	339F-12B	DME INDICATOR
622-2176-XXX	339F-12C	DME INDICATOR
622-2177-001	339F-12D	DME INDICATOR
622-2256-XXX	FGC-80	FLT GUIDANCE COMPUTER
622-2263-XXX	APA-80	AUTOPILOT AMPLIFIER
622-2265-XXX	FGP-81	FLT GUIDANCE PROGRAMMER
622-2313-XXX	FGP-80	FLT GUIDANCE PROGRAMMER
622-2362-001	ADF-60A	ADF RECEIVER
622-2363-001	ANT-60A	ADF ANTENNA
622-2366-XXX	334C-9A	SERVO
622-2425-XXX	IND-351C	NAV INDICATOR
622-2462-XXX	AMR-350H	AMP
622-2463-XXX	AUD-250H	AMP
622-2485-001	WXT-150	RADAR R/T
622-2486-XXX	IND-150	RADAR INDICATOR
622-2487-XXX	ANT-152	RADAR ANTENNA
622-2494-XXX	ANT-212	RADAR ANTENNA
622-2495-XXX	ANT-210	RADAR ANTENNA
622-2501-001	ANT-312	RADAR ANTENNA
622-2502-001	ANT-310	RADAR ANTENNA
622-2504-001	ANT-318	RADAR ANTENNA
622-2506-XXX	RMI-36	RMI
622-2536-001	IND-650	ADF INCICATOR
622-2614-012	562C-5F	AUTOPILOT AMPLIFIER
622-2733-XXX	334C-11	SERVO
622-2819-XXX	VIR-31H	NAV RECEIVER
622-2855-XXX	ALT-55B	RADIO ALTIMETER R/T

PART NUMBER	MODEL	DESCRIPTION
622-2873-001	ADF-60B	ADF RECEIVER
622-2937-XXX	ALI-55	RADIO ALTIMETER INDICATOR
622-2938-XXX	ALI-55A	RADIO ALTIMETER INDICATOR
622-3001-001	339F-12E	DME INDICATOR
622-3004-XXX	TDR-950L	TRANSPONDER
622-3101-XXX	AUD-251H	AMP
622-3102-001	MKR-351	MARKER RECEIVER
622-3104-XXX	FGC-80A	FLT GUIDANCE COMPUTER
622-3106-XXX	FGC-80B	FLT GUIDANCE COMPUTER
622-3108-XXX	APA-80A	AUTOPILOT AMPLIFIER
622-3109-XXX	APP-80A	AUTOPILOT CONTROL
622-3178-XXX	51Y-7C	ADF RECEIVER
622-3179-XXX	51Y-7D	ADF RECEIVER
622-3201-XXX	ALT-50A	RADIO ALTIMETER R/T
622-3255-XXX	51RV-4	NAV RECEIVER
622-3256-001	51RV-4A	NAV RECEIVER
622-3257-XXX	51RV-4B	NAV RECEIVER
622-3258-001	51RV-4C	NAV RECEIVER
622-3259-XXX	51RV-4D	NAV RECEIVER
622-3307-XXX	VHF-251S	COMM RECEIVER
622-3363-XXX	VHF-251E	COMM RECEIVER
622-3364-001	VHF-250S	COMM RECEIVER
622-3365-001	VHF-250E	COMM RECEIVER
622-3366-001	GLS-350E	G/S RECEIVER
622-3586-001	ANT-650A	ADF ANT
622-3587-001	RCR-650A	ADF RECEIVER
622-3670-001	TCR-451	DME R/T
622-3671-001	IND-450	DME INDICATOR
622-3672-001	IND-451	DME INDICATOR
622-3702-XXX	BDI-36	INDICATOR

PART NUMBER	MODEL	DESCRIPTION
622-3710-001	ANT-60B	ADF ANTENNA
622-3881-XXX	IND-40C	DME INDICATOR
622-3890-014	860F-4	RADIO ALTIMETER R/T
622-3896-XXX	FGC-80M	FLT GUIDANCE COMPUTER
622-3899-XXX	APC-80M	AUTOPILOT AMPLIFIER
622-3900-006	APA-80M	AUTOPILOT AMPLIFIER
622-3901-XXX	APP-80M	AUTOPILOT CONTROL
622-3915-XXX	IND-40	DME INDICATOR
622-3916-XXX	IND-40A	DME INDICATOR
622-3917-XXX	IND-40B	DME INDICATOR
622-3918-XXX	IND-41	DME INDICATOR
622-3919-XXX	IND-41A	DME INDICATOR
622-3920-XXX	IND-41B	DME INDICATOR
622-3921-XXX	IND-41C	DME INDICATOR
622-3992-XXX	APC-80A	AUTOPILOT AMPLIFIER
622-4020-001	ANT-212D	RADAR ANTENNA
622-4021-001	WXT-200A	RADAR R/T
622-4022-001	WXT-250A	RADAR R/T
622-4023-001	IND-200A	RADAR INDICATOR
622-4025-XXX	IND-250C	RADAR INDICATOR
622-4027-XXX	IND-250A	RADAR INDICATOR
622-4093-XXX	514A-7	HF CONTROL
622-4096-XXX	346D-2B	AMP
622-4160-XXX	DRI-55	RADIO ALTIMETER INDICATOR
622-4248-XXX	APA-80C	AUTOPILOT AMPLIFIER
622-4331-XXX	IND-300	RADAR INDICATOR
622-4477-XXX	IND-350A	NAV INDICATOR
622-4478-001	IND-351A	NAV INDICATOR
622-4479-001	IND-351D	NAV INDICATOR
622-4481-XXX	IND-30	NAV INDICATOR

PART NUMBER	MODEL	DESCRIPTION
622-4482-XXX	IND-31	NAV INDICATOR
622-4483-XXX	IND-31C	NAV INDICATOR
622-4487-001	346D-2	AMP
622-4523-XXX	CTL-20	COMM CONTROL
622-4524-XXX	CTL-30	NAV CONTROL
622-4526-XXX	CTL-60	ADF CONTROL
622-4527-XXX	CTL-90	ATC CONTROL
622-4938-XXX	RMI-30	RMI
622-4964-XXX	APC-80F	AUTOPILOT AMPLIFIER
622-5224-XXX	FGC-80F	FLT GUIDANCE COMPUTER
622-5367-001	ALI-55B	RADIO ALTIMETER INDICATOR
622-5441-XXX	APA-80F	AUTOPILOT AMPLIFIER
622-5588-001	IND-450C	DME INDICATOR
622-5796-XXX	APC-65	AUTOPILOT COMPUTER
622-5798-XXX	FCP-65	CONTROL PANEL
622-5799-XXX	MAP-65	MODE ANNUNCIATOR
622-5940-XXX	IND-220	RADAR INDICATOR
622-5941-XXX	IND-270	RADAR INDICATOR
622-5952-XXX	FGC-65	FLIGHT GUIDANCE COMPUTER
622-5953-XXX	FCP-65A	CONTROL PANEL
622-6137-001	VIR-32	NAV RECEIVER
622-6152-XXX	VHF-22A	COMM R/T
622-6153-XXX	VHF-22B	COMM R/T
622-6263-XXX	DME-42	DME R/T
622-6334-XXX	CTL-30R	NAV CONTROL
622-6389-XXX	VHF-21A	COMM R/T
622-6390-XXX	VHF-21B	COMM R/T
622-6513-001	ANT-312A	RADAR ANTENNA
622-6520-XXX	CTL-22	COM CONTROL
622-6521-XXX	CTL-32	NAV CONTROL

PART NUMBER	MODEL	DESCRIPTION
622-6522-XXX	CTL-62	ADF CONTROL
622-6523-XXX	CTL-92	ATC CONTROL
622-6524-XXX	IND-42A	DME INDICATOR
622-6590-01	CAD-62	CONTROL ADAPTER
622-6633-001	ANT-318A	RADAR ANTENNA
622-6684-XXX	APP-65A	AUTOPILOT PANEL
622-7309-101	DME-442	DME R/T
622-7318-XXX	IND-42C	DME INDICATOR
622-7337-XXX	WXT-250B	RADAR R/T
622-7444-001	ANT-310A	RADAR ANTENNA
622-7562-034	APA-80G	AUTOPILOT AMPLIFIER
622-7890-XXX	APC-65A	AUTOPILOT COMPUTER
622-8315-XXX	APC-65B	AUTOPILOT COMPUTER
622-8332-001	CAD-31	CONTROL ADAPTER
622-8434-XXX	APC-65C	AUTOPILOT COMPUTER
622-8630-XXX	FGC-80G	FLT GUIDANCE COMPUTER
622-8737-XXX	CTL-22A	COMM CONTROL
622-8738-XXX	CTL-32A	NAV CONTROL
622-8739-XXX	CTL-62A	ADF CONTROL
622-8740-XXX	CTL-92A	ATC CONTROL
622-8778-XXX	FGC-65C	FLIGHT GUIDANCE COMPUTER
622-9046-XXX	APC-65E	AUTOPILOT COMPUTER
622-9046-XXX	APC-65E	AUTOPILOT COMPUTER
622-9266-XXX	APC-65G	AUTOPILOT COMPUTER
622-9267-XXX	APC-65F	AUTOPILOT COMPUTER
622-9724-XXX	APC-65H	AUTOPILOT COMPUTER
622-9785-XXX	APC-65J	AUTOPILOT COMPUTER
7000839-XXX	RA-315/335	RADIO ALTIMETER IND
7001840-XXX	RT-300	RADIO ALTIMETER R/T
7004536-XXX	MS500A	MODE SELECTOR

PART NUMBER	MODEL	DESCRIPTION
700-D36407A-013	700-D36407A-013	Com CTL
700-D36409A-008	700-D36409A-008	Nav CTL
700-D36411A-002	700-D36411A-002	ADF CTL
772-1467-001	562C-4C	AUTOPILOT AMPLIFIER
772-5130-XXX	562A-5M	FLIGHT COMPUTER
772-5131-XXX	562C-4A	AUTOPILOT AMPLIFIER
772-5132-XXX	161E-2	MODE COUPLER
772-5410-001	614E-13	MODE SELECTOR
777-1492-XXX	51Y-7	ADF RECEIVER
777-1493-XXX	614L-11	ADF CONTROL
787-6211-XXX	621A-6	TRANSPONDER
787-6226-XXX	339F-8B	DME INDICATOR
787-6366-XXX	614L-12	ADF CONTROL
792-6216-XXX	51Y-7A	ADF RECEIVER
792-6275-XXX	614L-13	ADF CONTROL
792-6293-001	51R-8B	NAV RECEIVER
792-6348-XXX	614E-5A	AUTOPILOT CONTROLLER
792-6484-001	614E-4B	AUTOPILOT CONTROLLER
792-6657-001	VHF-20	COMM R/T
792-6669-XXX	614E-23E	MODE SELECTOR
792-6703-XXX	562A-5M5	FLIGHT COMPUTER
792-6978-001	792-6978-001	INS BATTERY
797-6470-XXX	614E-23C	MODE SELECTOR
800-0001-000	FCI-1	JETFONE
800-0002-XXX	C-3	CABIN CONTROL
800-0003-XXX	C-4	COCKPIT CONTROL
800-0004-XXX	HH-4	HANDSET
800-0005-XXX	C-3HF	CABIN CONTROL
8095259-XXXX	CD-402B	COMM CONTROL
8095260-XXXX	CD-412B	NAV CONTROL

PART NUMBER	MODEL	DESCRIPTION
8095261-XXXX	CD-422B	ATC CONTROL
8095262-XXXX	CD-432()	ADF CONTROL
8095263-XXXX	SD-442B	DME INDICATOR
8095444-XXXX	CD-413B	NAV CONTROL
8095536-8101	RS-811A	RADAR ART
8095537-XXXX	IN-812A	RADAR INDICATOR
87C005-01	4100	SLIP/SKID/SENSOR
92D023-02	3019B	TRIM CONTROL
93A055-XX	A55B	CVR CONTROL
93A100-10	A100/A	CVR
93A150-20	A150	CVR CONTROL
93A151-00	A151B	CVR CONTROL
93A152-00	A152	CVR CONTROL
97573-300	814B	TRANSPONDER
97637-XXXX	914 A/B	TRANSPONDER
A610-1	A610-1	AMP
AA15403-X	AA15403-X	Central Unit
ECU76A	ECU76A	Central Control
EJA75()	EJA()	Jack Box
ESB76A	ESB76A	Station Box
G2389	G2389	Aud CTL
G2622	G2622	Nav/Com CTL
G2977	G2977	Nav/Com Aux Nav CTL
G3245	G3245	Aud CTL
G3425	G3425	PA Amp
G-3440	G-3440	Speaker
G3703E	G3703E	Aud CTL
G3803	G3803	ISO Amp
G3805	G3805	INPH AMP
G3806	G3806	Spkr Amp

PART NUMBER	MODEL	DESCRIPTION
G3862	G3862	Avionics CTL
G3890	G3890	Avionics CTL
G4169A	G4169A	ADF CTL
G4213A	G4213A	Aud CTL
G4390	G4390	Nav/Com CTL
G4400	G4400	Aud CTL
G4433	G4433	ADF CTL
G4434A	G4434A	Com CTL
G4436A	G4436A	ATC CTL
G4481	G4481	Nav/Com CTL
G4482	G4482	ADF/Nav CTL
G4483A	G4483A	Com CTL
G4485	G4485	Nav/Com/DME/ATC CTL
G4501A	G4501A	Nav/Com CTL
G4518	G4518	Nav/DME CTL
G4683	G4683	Avionics CTL
G4874	G4874	Nav/Com CTL
G4875	G4875	ADF/ATC CTL
G5134B	G5134B	Aud CTL
G5259C	G5259C	Nav/Com CTL
G5325A	G5325A	Nav/Com CTL
G5392	G5392	Com CTL
G5394	G5394	Com/ATC CTL
G6022C	G6022C	Nav/Com CTL
G6022D	G6022D	Nav/Com CTL
G610-11	G610-11	AMP
G6205	G6205	Aud CTL
G6376	G6376	Aud CTL
G6860-01	G6860-01	Nav/Com CTL
G6860-02	G6860-02	Nav/Com CTL

PART NUMBER	MODEL	DESCRIPTION
G6860-12	G6860-12	Nav/Com CTL
G6860-13	G6860-13	Nav/Com/DME CTL
G6916-07	G6916-07	Nav/Com CTL
G6916-08	G6916-08	Nav/Com CTL
G6916-09	G6916-09	Nav/Com CTL
G6994-01	G6994-01	CVR Mixer
G7000	G7000	Com CTL
G7003-04	G7003-04	ATC CTL
G7023-()	G7023-()	811 Series
G7024-43	G7024-43	811 Series
G7025-10	G7025-10	811 Series
G7130-02	G7130-02	ATC/TCAS CTL
G7614-()	G7614-()	ATC/TCAS CTL/FID
G808	G-808	CONTROL
G863	G-863	CONTROL
GA-100-0000	GA-100	CVR
MI-55034-1	AVQ-47	RADAR ANT
MI-585000-X	AVI-200	RMI/CONVERTER
MI-585001-X	AVI-201	RMI
MI-585002-X	AVI-202	RMI CONV INDICATOR
MI-585008-X	AVQ-21	RADAR ANT
MI-585009	AVQ-21	RADAR R/T
MI-585011-X	AVQ-21	INDICATOR
MI-585015-X	AVQ-85	DME R/T
MI-585017-X	AVQ-85	DME INDICATOR
MI-585019	AVQ-95	TRANSPONDER
MI-585020-X	AVQ-95	TRANSPONDER
MI-585031-X	AVN-220	NAV RECEIVER
MI-585032-X	AVN-221	NAV RECEIVER
MI-585044-X	AVC-111A	COMM

PART NUMBER	MODEL	DESCRIPTION
MI-585048	AVQ-85	SYNCHRO CONVERTER
MI-585072	AVN-210A	NAV RECEIVER
MI-585073-X	AVN-220A	NAV RECEIVER
MI-585074-X	AVC-110A	COMM R/T
MI-585075-X	AVN-221A	NAV RECEIVER
MI-585077	AVN-211A	NAV RECEIVER
MI-585101-X	PRIMUS-10	DME R/T
MI-585134-X	PRIMUS-40	RADAR INDICATOR
MI-585135-X	PRIMUS-40	RADAR INDICATOR
MI-585136-1	PRIMUS-40	RADAR ANTENNA
MI-585147-1	PRIMUS-20	RADAR INDICATOR
MI-585148-X	PRIMUS-20	RADAR ANTENNA
MI-585149-X	PRIMUS-20	RADAR R/T
MI-585150	PRIMUS-30	RADAR INDICATOR
MI-585151-X	PRIMUS 30	RADAR ANTENNA
MI-585152	PRIMUS-35	RADAR R/T
MI-585157	PRIMUS-20	RADAR ANTENNA
MI-585171	PRIMUS-20	RADAR INDICATOR
MI-585191-2	PRIMUS-20	RADAR INDICATOR
MI-585192	PRIMUS-30	RADAR INDICATOR
MI-585200-X	RT-4001	RADAR R/T
MI-585201-X	DI-4001	RADAR INDICATOR
MI-585202-X	AP-4001	RADAR ANTENNA
MI-585203	PRIMUS-31	RADAR INDICATOR
MI-585204	PRIMUS-31	RADAR R/T
MI-585205-1	PRIMUS-31	RADAR ANTENNA
MI-585206-X	PRIMUS-21	RADAR INDICATOR
MI-585207	PRIMUS-21	RADAR R/T
MI-585210-2	DI-2002	RADAR INDICATOR
MI-585210-3	DI-2004	RADAR INDICATOR

PART NUMBER	MODEL	DESCRIPTION
MI-585210-4	DI-2003	RADAR INDICATOR
MI-585210-5	DI-2005	RADAR INDICATOR
MI-585210-X	PRIMUS-20	RADAR INDICATOR
MI-585222	RT-3001	RADAR R/T
MI-585222-X	RT-3002	RADAR R/T
MI-585223-X	DI-2006	RADAR INDICATOR
MI-585224-X	AP-3001	RADAR ANTENNA
MI-585228-X	DI-3003	RADAR INDICATOR
MI-585232-X	PRIMUS-30	RADAR INDICATOR
MI-585255-X	RTA-1001	RADAR ART
MI-585256	DI-1001	RADAR INDICATOR
MI-585256-1	DI-1002	RADAR INDICATOR
MI-585256-2	DI-1004	RADAR INDICATOR
MI-585256-3	DI-1003	RADAR INDICATOR
MI-585264-X	RTA-1002	RADAR ART
MI-585277-X	DI-2007	RADAR INDICATOR
MI-585280	RTA-1003	RADAR R/T
MI-585280-1	RTA-1003	RADAR R/T
MI-585300-X	RT-5001	RADAR R/T
MI-585300-X	RT-5001	RADAR R/T
MI-585301-X	DI-5001	RADAR INDICATOR
MI-585302-X	AP-5001	RADAR ANTENNA
MI-585322-X	PRIMUS-100	RADAR INDICATOR
MI-585343-X	DI-4002	RADAR INDICATOR
MI-585438-X	PRIMUS-150	INDICATOR
MI-585439-X	PRIMUS-150	INDICATOR
MI-591083-X	AVQ-75	DME R/T
MI-592019	AVQ-65	TRANSPONDER
MI-592100-X	AVN-210(X)	NAV RECEIVER