

# CE Avionics Capabilities List by Model #

<b>Model</b>	<b>Part number</b>	<b>Description</b>
1014A	6097768-01XX	TRANSPONDER
1014A	097768-0101	TRANSPONDER
1014B	097768-0201	TRANSPONDER
1014B	6097768-02XX	TRANSPONDER
137A-5	522-1837-000	ADF ANTENNA
161E-2	772-5132-XXX	MODE COUPLER
161F-1B	622-0283-XXX	AIRDATA COUPLER
161F-1C	622-0938-001	AIRDATA COUPLER
161H-1	622-1036-001	GAIN PROGRAMMER
1V009-05	1U009-05	COMPUTER SHOCKMOUNT
2203J	1U096993-10	ALTITUDE CONTROLLER
2203J	4000225-8502	ALTITUDE CONTROLLER
2268A-1	4006451-0501	CAPSTAN
3013H	4000523-8501	SERVO
3013H	1U014-04	SERVO
3013J	4009506-8501	SERVO
3013J	1U014-05	SERVO
3013K	4009506-8502	SERVO
3014D	1U008-04	TRIM SERVO
3014D-2	4000524-8505	TRIM SERVO
3014F	1U008-05	TRIM SERVO
3014F-2	4000524-8506	TRIM SERVO
3014G	1U008-06	TRIM SERVO
3014G-2	4000524-8507	TRIM SERVO
3014H	1U008-08	TRIM SERVO
3014H-2	4000524-8508	TRIM SERVO

<b>Model</b>	<b>Part number</b>	<b>Description</b>
3014J-2	4000524-8509	TRIM SERVO
3014K-2	4000524-8510	TRIM SERVO
3014L-2	4000524-8511	TRIM SERVO
3019B	92D023-02	TRIM CONTROL
313N-1	522-2446-XXX	CONTROL
313N-2/2D	522-2447-XXX	RADIO CONTROL
313N-3/3D	522-2448-XXX	DUAL CONTROL
313N-4	522-2449-XXX	COMM CONTROL
313N-4A	522-3613-000	CONTROL
313N-4B	522-3614-000	CONTROL
313N-4BA	522-3615-XXX	CONTROL
313N-4C	522-3616-XXX	CONTROL
313N-4D	522-3616-XXX	CONTROL
313N-5	522-2599-XXX	CONTROL
313N-5A	522-3617-XXX	CONTROL
313N-6/6B	522-2600-XXX	CONTROL
313N-6C	522-3690-XXX	CONTROL
313N-6F	522-4408-XXX	CONTROL
323A-2G	522-4945-001	FLUX VALVE
332C -10	622-0555-XXX	RMI
334C-11	622-2733-XXX	SERVO
334C-9A	622-2366-XXX	SERVO
339D-1	522-1859-XXX	DME INDICATOR
339D-1A	522-2604-XXX	DME INDICATOR
339D-3B	522-2919-XXX	DME INDICATOR
339D-3C	522-2929-XXX	DME INDICATOR
339D-3D	522-3343-XXX	INDICATOR
339F-12	622-1234-XXX	DME INDICATOR
339F-12A	622-2012-XXX	DME INDICATOR

<b>Model</b>	<b>Part number</b>	<b>Description</b>
339F-12B	622-2175-XXX	DME INDICATOR
339F-12C	622-2176-XXX	DME INDICATOR
339F-12D	622-2177-001	DME INDICATOR
339F-12E	622-3001-001	DME INDICATOR
339F-8B	787-6226-XXX	DME INDICATOR
339H-1	522-4114-XXX	INDICATOR
339H-1A	522-4354-002	RADIO ALTIMETER INDICATOR
339H-1B	522-4363-XXX	RADIO ALTIMETER INDICATOR
339H-1C	522-4504-001	RADIO ALTIMETER INDICATOR
339H-1D	522-4625-001	RADIO ALTIMETER INDICATOR
339H-1L	622-1038-001	RADIO ALTIMETER INDICATOR
339H-2	522-4825-XXX	RADIO ALTIMETER INDICATOR
339H-3	622-0171-XXX	RADIO ALTIMETER INDICATOR
339H-4	622-1204-XXX	RADIO ALTIMETER INDICATOR
339H-4A	622-1205-XXX	RADIO ALTIMETER INDICATOR
341C-1	522-1400-000	SERVO AMP
344C-1G	522-3866-XXX	INSTRUMENT AMPLIFIER
344C-9	622-0964-XXX	SERVO
346-B3	522-3763-XXX	AUDIO AMP
346D-1	522-0875-006	ADDRESS AMP
346D-1A	522-4353-001	AUDIO AMP
346D-1B	522-4538-XXX	AUDIO AMP
346D-2	622-4487-001	AMP
346D-2B	622-4096-XXX	AMP
356C-2	522-2514-003	AMP
356C-4	522-2866-XXX	ISOLATION AMP
356C-5	522-2904-000	AUDIO COMPENSATOR
356F-1	522-0881-004	SPEAKR AMP
387C-4	522-2899-000	AUDIO CONTROL

<b>Model</b>	<b>Part number</b>	<b>Description</b>
4007263-05XX	4007263-05XX	CALIBRATION BOARD
4090A	1U043-01	INDICATOR
4100	87C005-01	SLIP/SKID/SENSOR
514A-7	622-4093-XXX	HF CONTROL
51R-7A	522-2993-XXX	NAV RECEIVER
51R-8A	522-3467-XXX	NAV RECEIVER
51R-8B	792-6293-001	NAV RECEIVER
51RV-1	522-2450-XXX	NAV RECEIVER
51RV-1A	522-4366-101	NAV RECEIVER
51RV-1C	522-4501-XXX	NAV RECEIVER
51RV-2B	522-4977-XXX	NAV RECEIVER
51RV-2B	522-4280-XXX	NAV RECEIVER
51RV-4	622-3255-XXX	NAV RECEIVER
51RV-4A	622-3256-001	NAV RECEIVER
51RV-4B	622-3257-XXX	NAV RECEIVER
51RV-4C	622-3258-001	NAV RECEIVER
51RV-4D	622-3259-XXX	NAV RECEIVER
51Y-4(x)	522-1836-XXX	ADF RECEIVER
51Y-4A	522-2587-XXX	ADF RECEIVER
51Y-7	777-1492-XXX	ADF RECEIVER
51Y-7A	792-6216-XXX	ADF RECEIVER
51Y-7C	622-3178-XXX	ADF RECEIVER
51Y-7D	622-3179-XXX	ADF RECEIVER
51Z-4	522-2996-XXX	MARKER RECEIVER
51Z-4	522-2644-XXX	MKR RECEIVER
5485A	4000507-8501	FLIGHT CONTROL
5486A	4000494-8501	MODE SELECTOR
5487C-1	1U030-05	FLIGHT CONTROLLER
5487C-2	1U030-10	FLIGHT CONTROLLER

<b>Model</b>	<b>Part number</b>	<b>Description</b>
5487C-2	1U030-09	FLIGHT CONTROLLER
5487D-1	1U030-07	FLIGHT CONTROLLER
5487D-1	1U030-06	FLIGHT CONTROLLER
5487D-2	1U030-11	FLIGHT CONTROLLER
5487F-1	1U030-08	FLIGHT CONTROLLER
5487F-2	1U030-12	FLIGHT CONTROLLER
5487G	4000493-8501	FLIGHT CONTROL
5489A	1U096-01	SWITCH
54W-1C	522-3948-XXX	COMPARATOR WARNING MONITO
54W-1D	522-3949-XXX	COMPARATOR WARNING MONITO
5536E	1U088-XX	COMPUTER
5536F	4000495-8501	COMPUTER
562A-5M	772-5130-XXX	FLIGHT COMPUTER
562A-5M5	792-6703-XXX	FLIGHT COMPUTER
562C-13	622-1522-XXX	AUTOPILOT AMPLIFIER
562C-4A	772-5131-XXX	AUTOPILOT AMPLIFIER
562C-4C	772-1467-001	AUTOPILOT AMPLIFIER
562C-5B	622-1116-XXX	AUTOPILOT AMPLIFIER
562C-5C	622-1281-XXX	AUTOPILOT AMPLIFIER
562C-5F	622-2614-012	AUTOPILOT AMPLIFIER
590A-6	229-9015-010	ALTITUDE CONTROL
590A-6A	270-0859-010	ALTITUDE CONTROL
613L-3	270-2436-XXX	ATC CONTROL
614E-10()	522-0710-XXX	MODE SELECTOR
614E-13	772-5410-001	MODE SELECTOR
614E-23C	797-6470-XXX	MODE SELECTOR
614E-23E	792-6669-XXX	MODE SELECTOR
614E-23G	622-0210-XXX	MODE COUPLER
614E-38	622-1523-XXX	MODE SELECTOR

<b>Model</b>	<b>Part number</b>	<b>Description</b>
614E-4	522-3551-XXX	AUTOPILOT CONTROLLER
614E-4B	792-6484-001	AUTOPILOT CONTROLLER
614E-5A	792-6348-XXX	AUTOPILOT CONTROLLER
614L-11	777-1493-XXX	ADF CONTROL
614L-12	787-6366-XXX	ADF CONTROL
614L-13	792-6275-XXX	ADF CONTROL
614L-8	522-2357-XXX	CONTROL
618M- 2B	522-4088-XXX	COMM R/T
618M-1	522-2466-004	COMM R/T
618M-1( )	522-2754-XXX	COMM R/T
618M-1D	522-3132-004	COMM R/T
618M-2D	522-4089-XXX	COMM R/T
618M-3	622-1181-XXX	COMM R/T
618M-3A	622-1396-XXX	COMM R/T
618T-1B	522-4828-XXX	HF R/T
618T-3	522-1660-XXX	HF TRANSCEIVER
618T-3B	522-4830-XXX	HF R/T
618T-X	522-1230-XXX	HF R/T
621-A3	522-2703-XXX	TRANSPONDER
621A-6	787-6211-XXX	TRANSPONDER
6744A-1	1U016-02	ADAPTOR
700-D36407A-013	700-D36407A-013	Com CTL
700-D36409A-008	700-D36409A-008	Nav CTL
700-D36411A-002	700-D36411A-002	ADF CTL
792-6978-001	792-6978-001	INS BATTERY
814B	97573-300	TRANSPONDER
814B	6097573-XXX	TRANSPONDER
860E- 3	522-4209-XXX	DME R/T
860-E2	522-2702-XXX	DME R/T

<b>Model</b>	<b>Part number</b>	<b>Description</b>
860-F1	522-3698-XXX	RADIO ALTIMETER R/T
860F-2	622-0410-001	RADIO ALTIMETER R/T
860F-4	622-3890-014	RADIO ALTIMETER R/T
913K-1	622-0966-XXX	AUTOPILOT COMPUTER/CONTRO
914 A/B	97637-XXXX	TRANSPONDER
914B	6097637-301	TRANSPONDER
A100/A	93A100-10	CVR
A150	93A150-20	CVR CONTROL
A151B	93A151-00	CVR CONTROL
A152	93A152-00	CVR CONTROL
A55B	93A055-XX	CVR CONTROL
A610-1	A610-1	AMP
AA15403-X	AA15403-X	Central Unit
AC-1050A	46250-0001	AIR DATA UNIT
AC-111	501-10XX-XX	AUTOPILOT CONTROLLER
AC-111()	501-1254-XX	AUTOPILOT CONTROLLER
AC-200()	501-1107-XX	AUTOPILOT CONTROLLER
AC-200()	501-1256-XX	AUTOPILOT CONTROLLER
AC-844B	4000186-8502	ALTITUDE CONTROLLER
AD-816A	4000368-XXXX	ADAPTER
AD-854A	4000589-5401	TRIM ADAPTER
ADF-60A	622-2362-001	ADF RECEIVER
ADF-60B	622-2873-001	ADF RECEIVER
ALI-55	622-2937-XXX	RADIO ALTIMETER INDICATOR
ALI-55A	622-2938-XXX	RADIO ALTIMETER INDICATOR
ALI-55B	622-5367-001	RADIO ALTIMETER INDICATOR
ALT-50A	622-3201-XXX	RADIO ALTIMETER R/T
ALT-55B	622-2855-XXX	RADIO ALTIMETER R/T
AMR-350	622-2087-XXX	AMP

<b>Model</b>	<b>Part number</b>	<b>Description</b>
AMR-350H	622-2462-XXX	AMP
ANT-152	622-2487-XXX	RADAR ANTENNA
ANT-210	622-2495-XXX	RADAR ANTENNA
ANT-212	622-2494-XXX	RADAR ANTENNA
ANT-212D	622-4020-001	RADAR ANTENNA
ANT-310	622-2502-001	RADAR ANTENNA
ANT-310A	622-7444-001	RADAR ANTENNA
ANT-312	622-2501-001	RADAR ANTENNA
ANT-312A	622-6513-001	RADAR ANTENNA
ANT-318	622-2504-001	RADAR ANTENNA
ANT-318A	622-6633-001	RADAR ANTENNA
ANT-60A	622-2363-001	ADF ANTENNA
ANT-60B	622-3710-001	ADF ANTENNA
ANT-650A	622-3586-001	ADF ANT
AP-3001	MI-585224-X	RADAR ANTENNA
AP-4001	MI-585202-X	RADAR ANTENNA
AP-5001	MI-585302-X	RADAR ANTENNA
APA-80	622-2263-XXX	AUTOPILOT AMPLIFIER
APA-80A	622-3108-XXX	AUTOPILOT AMPLIFIER
APA-80C	622-4248-XXX	AUTOPILOT AMPLIFIER
APA-80F	622-5441-XXX	AUTOPILOT AMPLIFIER
APA-80G	622-7562-034	AUTOPILOT AMPLIFIER
APA-80M	622-3900-006	AUTOPILOT AMPLIFIER
APC-65	622-5796-XXX	AUTOPILOT COMPUTER
APC-65A	622-7890-XXX	AUTOPILOT COMPUTER
APC-65B	622-8315-XXX	AUTOPILOT COMPUTER
APC-65C	622-8434-XXX	AUTOPILOT COMPUTER
APC-65E	622-9046-XXX	AUTOPILOT COMPUTER
APC-65E	622-9046-XXX	AUTOPILOT COMPUTER



<b>Model</b>	<b>Part number</b>	<b>Description</b>
APC-65F	622-9267-XXX	AUTOPILOT COMPUTER
APC-65G	622-9266-XXX	AUTOPILOT COMPUTER
APC-65H	622-9724-XXX	AUTOPILOT COMPUTER
APC-65J	622-9785-XXX	AUTOPILOT COMPUTER
APC-80	522-2901-XXX	AUTOPILOT AMPLIFIER
APC-80A	622-3992-XXX	AUTOPILOT AMPLIFIER
APC-80F	622-4964-XXX	AUTOPILOT AMPLIFIER
APC-80M	622-3899-XXX	AUTOPILOT AMPLIFIER
APP-65A	622-6684-XXX	AUTOPILOT PANEL
APP-80	622-0141-XXX	AUTOPILOT CONTROL
APP-80A	622-3109-XXX	AUTOPILOT CONTROL
APP-80M	622-3901-XXX	AUTOPILOT CONTROL
ART-161A	4001018-XXXX	RADAR ANT/RT
ART-231A	4001845-XXXX	RDR ART
AS-895A	44400-XXXX	ALTITUDE SENSOR
AT-133A	4000765-XXXX	PARABOLIC ANT
AT-143A	4000654-XXXX	RADAR ANTENNA
AUD-250	622-2088-XXX	AMP
AUD-250H	622-2463-XXX	AMP
AUD-251H	622-3101-XXX	AMP
AVC-110A	MI-585074-X	COMM R/T
AVC-111A	MI-585044-X	COMM
AVI-200	MI-585000-X	RMI/CONVERTER
AVI-201	MI-585001-X	RMI
AVI-202	MI-585002-X	RMI CONV INDICATOR
AVN-210(X)	MI-592100-X	NAV RECEIVER
AVN-210A	MI-585072	NAV RECEIVER
AVN-211A	MI-585077	NAV RECEIVER
AVN-220	MI-585031-X	NAV RECEIVER

<b>Model</b>	<b>Part number</b>	<b>Description</b>
AVN-220A	MI-585073-X	NAV RECEIVER
AVN-221	MI-585032-X	NAV RECEIVER
AVN-221A	MI-585075-X	NAV RECEIVER
AVQ-21	MI-585009	RADAR R/T
AVQ-21	MI-585008-X	RADAR ANT
AVQ-21	MI-585011-X	INDICATOR
AVQ-47	MI-55034-1	RADAR ANT
AVQ-65	MI-592019	TRANSPONDER
AVQ-75	MI-591083-X	DME R/T
AVQ-85	MI-585015-X	DME R/T
AVQ-85	MI-585017-X	DME INDICATOR
AVQ-85	MI-585048	SYNCHRO CONVERTER
AVQ-95	MI-585020-X	TRANSPONDER
AVQ-95	MI-585019	TRANSPONDER
BDI-36	622-3702-XXX	INDICATOR
C-1050A	46240-0000	CONTROL UNIT
C-114	400-0018-2	CONTROL
C-115	400-0028-000	COCKPIT CONTROL
C-117-6	400-0038-001	CONTROL
C-118	400-0032-XXX	CABIN CONTROL
C-118D	400-0124-XXX	FLITEFONE CONTROL
C-118E	400-0138-XXX	FLITEFONE CONTROL
C-119	400-0039-000	CONTROL
C-120-6	400-0041-000	CONTROL
C-3	800-0002-XXX	CABIN CONTROL
C-3HF	800-0005-XXX	CABIN CONTROL
C-4	800-0003-XXX	COCKPIT CONTROL
C-530A	37960-1120	CONTRL UNIT
C-531A	41090-1128	CONTROL UNIT

<b>Model</b>	<b>Part number</b>	<b>Description</b>
C-830FD	41780-XXXX	CONTROL UNIT
CA-1050A/FD	46210-XXXX	COMPUTER AMPLIFIER
CA-200()	501-1108-XX	AUTOPILOT COMPUTER
CA-530A/FD	41120-XXXX	COMPUTER AMPLIFIER
CA-550A/FD	42860-XXXX	AUTOPILOT AMPLIFIER
CA-814( )	4000288-XXXX	COMPUTER
CAD-31	622-8332-001	CONTROL ADAPTER
CAD-62	622-6590-01	CONTROL ADAPTER
CD-402B	071-1341-XX	CONTROL
CD-402B	8095259-XXXX	COMM CONTROL
CD-412B	071-1343-XX	CONTROL
CD-412B	8095260-XXXX	NAV CONTROL
CD-413B	071-1377-XX	NAV CONTROL
CD-413B	8095444-XXXX	NAV CONTROL
CD-422B	8095261-XXXX	ATC CONTROL
CD-422B	071-1345-XX	CONTROL
CD-432()	8095262-XXXX	ADF CONTROL
CD-432B	071-1347-XX	ADF CONTROL
CTL-20	622-4523-XXX	COMM CONTROL
CTL-22	622-6520-XXX	COM CONTROL
CTL-22A	622-8737-XXX	COMM CONTROL
CTL-30	622-4524-XXX	NAV CONTROL
CTL-30R	622-6334-XXX	NAV CONTROL
CTL-32	622-6521-XXX	NAV CONTROL
CTL-32A	622-8738-XXX	NAV CONTROL
CTL-60	622-4526-XXX	ADF CONTROL
CTL-62	622-6522-XXX	ADF CONTROL
CTL-62A	622-8739-XXX	ADF CONTROL
CTL-90	622-4527-XXX	ATC CONTROL

<b>Model</b>	<b>Part number</b>	<b>Description</b>
CTL-92	622-6523-XXX	ATC CONTROL
CTL-92A	622-8740-XXX	ATC CONTROL
CV-8704A	4001538-0401	COMPUTER
DA-1203A	4000504-XXXX	RADAR ANTENNA
DA-144A	4000790-XXXX	RADAR ANTENNA
DF-431()	066-1105-XX	ADF RECEIVER
DF-431()	066-1104-XX	ADF RECEIVER
DI-1001	MI-585256	RADAR INDICATOR
DI-1002	MI-585256-1	RADAR INDICATOR
DI-1003	MI-585256-3	RADAR INDICATOR
DI-1004	MI-585256-2	RADAR INDICATOR
DI-2002	MI-585210-2	RADAR INDICATOR
DI-2003	MI-585210-4	RADAR INDICATOR
DI-2004	MI-585210-3	RADAR INDICATOR
DI-2005	MI-585210-5	RADAR INDICATOR
DI-2006	MI-585223-X	RADAR INDICATOR
DI-2007	MI-585277-X	RADAR INDICATOR
DI-3003	MI-585228-X	RADAR INDICATOR
DI-4001	MI-585201-X	RADAR INDICATOR
DI-4002	MI-585343-X	RADAR INDICATOR
DI-5001	MI-585301-X	RADAR INDICATOR
DM-441B	066-1107-XX	DME R/T
DM-441B	3614019-XXXX	DME R/T
DME-40	622-1233-XXX	DME R/T
DME-42	622-6263-XXX	DME R/T
DME-442	622-7309-101	DME R/T
DRI-55	622-4160-XXX	RADIO ALTIMETER INDICATOR
EC-834A	4000202-8501	ERROR CORRECTOR
ECU76A	ECU76A	Central Control

<b>Model</b>	<b>Part number</b>	<b>Description</b>
EJA( )	EJA75( )	Jack Box
ESB76A	ESB76A	Station Box
FC-110	542-1071	TRIM DISCONNECT BOARD
FC-110()	4-2020-XX	AUTOPILOT COMPUTER
FC-110()	4-2020SA16-XX	TRIM COUPLER BD
FC-110()	4-2020SA12-XX	SERVO AMP BOARD
FC-110()	4-2020SA8-XX	PITCH CALIBRATION BOARD
FC-110()	4-2020SA15-XX	LONGITUDINAL COUPLER BD
FC-110()	4-2020SA14-XX	LATERAL COUPLER LOGIC BD
FC-110()	4-2020SA9-XX	ROLL CALIBRATION BOARD
FC-110()	4-2020SA10-XX	YAW CALIBRATION BOARD
FC-110()	4-2020-XXX	AUTOPILOT COMPUTER
FC-110()	4-2020SA13-XX	LATERAL COUPLER SIGNAL BD
FC-813( )	4000256-XXXX	FLIGHT CONTROLLER
FC-823( )	4000315-XXXX	CONTROLLER
FC-8702A	4001533-0201	FLIGHT CONTROLLER
FC-872A	4000977-7203	FLIGHT CONTROLLER
FCI-1	800-0001-000	JETPHONE
FCP-65	622-5798-XXX	CONTROL PANEL
FCP-65A	622-5953-XXX	CONTROL PANEL
FGC-65	622-5952-XXX	FLIGHT GUIDANCE COMPUTER
FGC-65C	622-8778-XXX	FLIGHT GUIDANCE COMPUTER
FGC-80	622-2256-XXX	FLT GUIDANCE COMPUTER
FGC-80A	622-3104-XXX	FLT GUIDANCE COMPUTER
FGC-80B	622-3106-XXX	FLT GUIDANCE COMPUTER
FGC-80F	622-5224-XXX	FLT GUIDANCE COMPUTER
FGC-80G	622-8630-XXX	FLT GUIDANCE COMPUTER
FGC-80M	622-3896-XXX	FLT GUIDANCE COMPUTER
FGP-80	622-2313-XXX	FLT GUIDANCE PROGRAMMER

<b>Model</b>	<b>Part number</b>	<b>Description</b>
FGP-81	622-2265-XXX	FLT GUIDANCE PROGRAMMER
FGS-70	1975548-X	MODE CONTROLLER
FGS-70	1975549-X	AUTOPILOT CONTROLLER
FGS-70	1954493-X	CONTROL COMPUTER
FGS-70	1954492-X	COMMAND COMPUTER
FGS-70	1880758-2	MOTOR SPEED CONTROLLER
FX500	4018369-902	FLIGHT COMPUTER
FX-833A	4000191-8501	FLUX SENSOR
FX-833A	4000191-8502	FLUX SENSOR
FZ500	4018369-907	FLIGHT COMPUTER
FZ500	4018369-904	FLIGHT COMPUTER
FZ500	4018369-911	FLIGHT COMPUTER
FZ500	4018369-905	FLIGHT COMPUTER
FZ500	4018369-901	FLIGHT COMPUTER
G2389	G2389	Aud CTL
G2622	G2622	Nav/Com CTL
G2977	G2977	Nav/Com Aux Nav CTL
G3245	G3245	Aud CTL
G3425	G3425	PA Amp
G-3440	G-3440	Speaker
G3703E	G3703E	Aud CTL
G3803	G3803	ISO Amp
G3805	G3805	INPH AMP
G3806	G3806	Spkr Amp
G3862	G3862	Avionics CTL
G3890	G3890	Avionics CTL
G4169A	G4169A	ADF CTL
G4213A	G4213A	Aud CTL
G4390	G4390	Nav/Com CTL

<b>Model</b>	<b>Part number</b>	<b>Description</b>
G4400	G4400	Aud CTL
G4433	G4433	ADF CTL
G4434A	G4434A	Com CTL
G4436A	G4436A	ATC CTL
G4481	G4481	Nav/Com CTL
G4482	G4482	ADF/Nav CTL
G4483A	G4483A	Com CTL
G4485	G4485	Nav/Com/DME/ATC CTL
G4501A	G4501A	Nav/Com CTL
G4518	G4518	Nav/DME CTL
G4683	G4683	Avionics CTL
G4874	G4874	Nav/Com CTL
G4875	G4875	ADF/ATC CTL
G5134B	G5134B	Aud CTL
G5259C	G5259C	Nav/Com CTL
G5325A	G5325A	Nav/Com CTL
G5392	G5392	Com CTL
G5394	G5394	Com/ATC CTL
G6022C	G6022C	Nav/Com CTL
G6022D	G6022D	Nav/Com CTL
G610-11	G610-11	AMP
G6205	G6205	Aud CTL
G6376	G6376	Aud CTL
G6860-01	G6860-01	Nav/Com CTL
G6860-02	G6860-02	Nav/Com CTL
G6860-12	G6860-12	Nav/Com CTL
G6860-13	G6860-13	Nav/Com/DME CTL
G6916-07	G6916-07	Nav/Com CTL
G6916-08	G6916-08	Nav/Com CTL

<b>Model</b>	<b>Part number</b>	<b>Description</b>
G6916-09	G6916-09	Nav/Com CTL
G6994-01	G6994-01	CVR Mixer
G7000	G7000	Com CTL
G7003-04	G7003-04	ATC CTL
G7023-( )	G7023-( )	811 Series
G7024-43	G7024-43	811 Series
G7025-10	G7025-10	811 Series
G7130-02	G7130-02	ATC/TCAS CTL
G7614-( )	G7614-( )	ATC/TCAS CTL/FID
G-808	G808	CONTROL
G-863	G863	CONTROL
GA-100	GA-100-0000	CVR
GLS-350	622-2084-001	G/S RECEIVER
GLS-350E	622-3366-001	G/S RECEIVER
HH-114	400-0019-XXX	HANDSET
HH-118	400-0031-XXX	FLITE PHONE CONTROL
HH-4	800-0004-XXX	HANDSET
IN-1102A	4000964-XXXX	RADAR INDICATOR
IN-1152A	4001922-XXXX	RADAR INDICATOR
IN-1152B	4001948-XXXX	RADAR INDICATOR
IN-1202A	4000503-XXXX	RADAR INDICATOR
IN-1202B	4001098-XXXX	RADAR INDICATOR
IN-1302( )	4000965-XXXX	RADAR INDICATOR
IN-1302A	400965-0204	RADAR INDICATOR
IN-132A	4000764-XXXX	RADAR INDICATOR
IN-1402( )	4000833-XXXX	RADAR INDICATOR
IN-152A	4000946-XXXX	RADAR INDICATOR
IN-182A	066-3084-00	RADAR INDICATOR
IN-2021A	4001291-XXXX	RADAR INDICATOR



<b>Model</b>	<b>Part number</b>	<b>Description</b>
IN-2022A	4001373-XXXX	RADAR INDICATOR
IN-2025( )	4001670-XXXX	RADAR INDICATOR
IN-2026A	4001294-XXXX	RADAR INDICATOR
IN-2027A	4001295-XXXX	RADAR INDICATOR
IN-812A	066-3114-XX	RADAR INDICATOR
IN-812A	8095537-XXXX	RADAR INDICATOR
IN-835A	4000192-8501	SLAVING METER
INA-232A	4001846-XXXX	RADAR INDICATOR
IND-150	622-2486-XXX	RADAR INDICATOR
IND-200A	622-4023-001	RADAR INDICATOR
IND-220	622-5940-XXX	RADAR INDICATOR
IND-250A	622-4027-XXX	RADAR INDICATOR
IND-250C	622-4025-XXX	RADAR INDICATOR
IND-270	622-5941-XXX	RADAR INDICATOR
IND-30	622-4481-XXX	NAV INDICATOR
IND-300	622-4331-XXX	RADAR INDICATOR
IND-31	622-4482-XXX	NAV INDICATOR
IND-31C	622-4483-XXX	NAV INDICATOR
IND-350	622-2082-XXX	NAV INDICATOR
IND-350A	622-4477-XXX	NAV INDICATOR
IND-351	622-2083-XXX	NAV INDICATOR
IND-351A	622-4478-001	NAV INDICATOR
IND-351C	622-2425-XXX	NAV INDICATOR
IND-351D	622-4479-001	NAV INDICATOR
IND-40	622-3915-XXX	DME INDICATOR
IND-40A	622-3916-XXX	DME INDICATOR
IND-40B	622-3917-XXX	DME INDICATOR
IND-40C	622-3881-XXX	DME INDICATOR
IND-41	622-3918-XXX	DME INDICATOR

<b>Model</b>	<b>Part number</b>	<b>Description</b>
IND-41A	622-3919-XXX	DME INDICATOR
IND-41B	622-3920-XXX	DME INDICATOR
IND-41C	622-3921-XXX	DME INDICATOR
IND-42A	622-6524-XXX	DME INDICATOR
IND-42C	622-7318-XXX	DME INDICATOR
IND-450	622-3671-001	DME INDICATOR
IND-450C	622-5588-001	DME INDICATOR
IND-451	622-3672-001	DME INDICATOR
IND-650	622-2536-001	ADF INCICATOR
KA-117	065-5006-XX	TRIM ADAPTER
KA-119	071-1087-XX	AUDIO CONTROL
KA-122	071-1085-00	DME HOLD ADAPTER
KA-126	071-1220-XX	RADAR R/T
KA-128	071-1285-XX	RADAR ART
KA-134	071-2009-02	AUDIO CONTROL
KA-135	071-1148-00	MATCHING ASSY
KA-142	065-5020-XX	ADAPTER
KA-285	065-0032-XX	PANEL
KA-35	066-3012-XX	LIGHT ASSY MKR
KA-36	071-1034-00	LOOP ANTENNA
KA-37	071-2006-XX	AUDIO CONTROL PANEL
KA-39	071-1041-01	POWER CONVERTER
KA-40	071-0003-00	MARKER LIGHT ASSY
KA-42A	071-1098-00	ADF ANTENNA
KA-42B	071-1133-00	ADF ANTENNA
KA-43	071-0004-00	CONVERTER
KA-44	071-1196-00	ADF ANTENNA
KA-44B	071-1234-00	ADF ANTENNA
KA-47	071-0006-00	DME CODE CONVERTER

<b>Model</b>	<b>Part number</b>	<b>Description</b>
KA-49	071-1051-XX	RADAR ANTENNA
KA-51A	071-1053-XX	SLAVE ACCESSORY
KA-51A	071-1503-04	SLAVING SWITCH
KA-51B	071-1242-XX	SLAVE ACCESSORY
KA-58	071-0016-00	A/P ADAPTER
KA-594	071-1268-XX	ADAPTER
KAA-445	071-2003-00	AUDIO CENTER
KAA-455	071-2007-XX	AUDIO CENTER
KAC-325	065-0019-XX	AUTOPILOT COMPUTER
KAC-952	064-1017-XX	HF ANT COUPLER
KC-290	065-0033-00	CONTROLLER
KC-291	065-0035-XX	CONTROLLER
KC-292	065-0037-00	CONTROLLER
KC-295	065-0034-XX	COMPUTER
KC-296	065-0036-XX	YAW COMPUTER
KCP-320	065-0018-XX	FLIGHT COMPUTER
KCU-561	071-1060-XX	NAV CONTROL
KCU-565A	066-4005-00	NAV DISPLAY KNR
KCU-578	071-1061-XX	DISPLAY ADF/ATC
KCU-582	071-1069-XX	ADF CONTROL
KCU-591	071-1062-XX	HF CONTROL
KCU-951	064-1016-00	HF CONTROL
KDA-335	066-1046-00	DISPLAY ADAPTER
KDA-696	071-1074-00	BATTERY PACK
KDA-697	071-1076-00	RMI CONVERTER
KDA-698	071-1143-00	MEMORY TIMER
KDC-380	065-0016-01	AIRDATA COMPUTER
KDC-381	065-0020-00	AIRDATA COMPUTER
KDE-566	071-1072-XX	DATA LOADER

<b>Model</b>	<b>Part number</b>	<b>Description</b>
KDF-800	066-1016-XX	ADF RECEIVER
KDF-8000	066-1022-01	ADF RECEIVER
KDF-805	066-1047-00	ADF RECEIVER
KDF-806	066-1077-XX	ADF RECEIVER
KDI-570	066-3032-XX	DME INDICATOR
KDI-570	066-3003-XX	DME INDICATOR
KDI-571	066-3032-XX	DME INDICATOR
KDI-572	066-1069-XX	DME INDICATOR
KDI-573	066-1069-XX	DME INDICATOR
KDI-573B	066-1091-00	DME INDICATOR
KDI-574	066-1069-XX	DME INDICATOR
KDM-7000	066-1019-XX	DME R/T
KDM-7000B	066-3057-XX	DME R/T
KDM-705/A	066-1037-XX	DME R/T
KDM-706/A	066-1066-XX	DME R/T
KFS-560	071-1013-XX	NAV CONTROL
KFS-560B	071-1054-XX	NAV CONTROL
KFS-564	071-1216-XX	NAV CONTROL
KFS-564A	071-1283-XX	NAV CONTROL
KFS-570	071-1014-XX	ATC CONTROL
KFS-570A	071-1043-XX	ATC CONTROL
KFS-575	071-1038-00	ATC CONTROL
KFS-576	071-1192-XX	ATC CONTROL
KFS-580	071-1033-00	ADF CONTROL
KFS-580B	071-1066-XX	ADF CONTROL
KFS-585B	071-1067-XX	ADF CONTROL
KFS-586	071-1284-XX	ADF CONTROL
KFS-586/A	071-1210-XX	ADF CONTROL
KFS-590A/B	071-1012-XX	COMM CONTROL

<b>Model</b>	<b>Part number</b>	<b>Description</b>
KFS-594	071-1274-XX	HF CONTROL
KFS-598	071-1215-XX	COMM CONTROL
KFS-598A	071-1282-XX	COMM CONTROL
KGM-690	066-1006-00	G/S MKR RECEIVER
KGM-691	066-1035-XX	GLIDESLOPE / MKR
KGS-680	066-1005-00	GLIDESLOPE RECEIVER
KGS-681	066-1036-00	GLIDESLOPE RECEIVER
KI-201C	066-3008-02	NAV INDICATOR
KI-202	066-3034-XX	NAV INDICATOR
KI-203	066-3034-XX	NAV INDICATOR
KI-204	066-3034-XX	NAV INDICATOR
KI-205	066-3039-00	NAV INDICATOR
KI-206	066-3034-XX	NAV INDICATOR
KI-207	066-3034-XX	NAV INDICATOR
KI-208	066-3056-XX	NAV INDICATOR
KI-209	066-3056-XX	NAV INDICATOR
KI-211C	069-1010-04	NAV INDICATOR
KI-212	069-1010-00	NAV INDICATOR
KI-213	066-3025-00	NAV INDICATOR
KI-214	066-3025-XX	NAV INDICATOR
KI-225	066-3017-XX	ADF INDICATOR
KI-226	066-3021-00	RMI
KI-227	066-3063-XX	ADF INDICATOR
KI-228	066-3059-XX	ADF INDICATOR
KI-229	066-3038-00	RMI
KI-240	066-3026-00	RADAR INDICATOR
KI-248	066-3076-XX	RADAR INDICATOR
KI-261	066-3037-00	DME INDICATOR
KI-265	066-3018-00	DME INDICATOR

<b>Model</b>	<b>Part number</b>	<b>Description</b>
KI-266	066-3047-XX	DME INDICATOR
KI-267	066-3052-00	DME INDICATOR
KI-525	066-3029-XX	HSI
KI-525A	066-3046-XX	HSI
KM-275	065-0030-00	MOUNT
KM-276	065-0031-XX	MOUNT
KM-277	300-2084-XX	MOUNT
KMA-20	066-1024-XX	AUDIO MARKER
KMA-24/H	066-1055-XX	AUDIO PANEL / MKR
KMC-340	065-0017-XX	MODE CONTROLLER
KMR-675	066-1044-00	MARKER RECEIVER
KMT-110	071-1035-XX	FLUX VALVE
KMT-112	071-1052-00	FLUX VALVE
KN-53	066-1067-00	NAV RECEIVER
KN-62	066-1064-00	DME R/T
KN-62A	066-1068-XX	DME R/T
KN-63	066-1070-XX	DME R/T
KN-64	066-1088-XX	DME R/T
KN-65/A	066-1029-XX	DME R/T
KN-72	066-4009-00	CONVERTER
KN-73	066-1033-00	G/S RECEIVER
KN-74	066-4003-00	R-NAV COMPUTER
KN-75	066-1063-00	GLIDESLOPE RECEIVER
KN-77	066-4004-00	CONVERTER
KNC-610	066-4002-XX	R-NAV COMPUTER
KNI-415	066-3031-XX	RAD ALT INDICATOR
KNI-416	066-3034-00	RAD ALT INDICATOR
KNI-416	066-3044-00	RAD ALT INDICATOR
KNI-416	066-3034-03	RAD ALT INDICATOR

<b>Model</b>	<b>Part number</b>	<b>Description</b>
KNI-580	066-3014-XX	ADF INDICATOR
KNI-581	066-3042-XX	RMI INDICATOR
KNI-582	066-3060-XX	RMI INDICATOR
KNI-585	066-3014-XX	ADF INDICATOR
KNR 665A	066-4010-00	NAV RNAV/COV/GS
KNR-600	071-1010-00	NAV RECEIVER
KNR-600	066-1010-00	NAV RECEIVER
KNR-600A	066-1026-XX	NAV RECEIVER
KNR-601	066-1030-00	NAV RECEIVER
KNR-615	066-1043-XX	NAV RECEIVER
KNR-630	066-4007-00	NAV RECEIVER
KNR-631	066-4007-01	NAV RECEIVER
KNR-632	066-4007-02	NAV RECEIVER
KNR-633	066-4007-03	NAV RECEIVER
KNR-634 /A	066-1078-XX	NAV RECEIVER
KNR-660	066-1008-00	NAV RECEIVER
KNR-660A	066-1027-00	NAV RECEIVER
KNR-661	066-1031-00	NAV RECEIVER
KNR-665	066-4006-XX	NAV / RNAV
KNS-80	066-4008-XX	R-NAV
KR-21	066-1021-XX	MARKER RECEIVER
KR-85	066-1023-00	ADF RECEIVER
KR-86	066-1038-00	ADF RECEIVER
KR-87	066-1072-XX	ADF RECEIVER
KRA-405	066-1048-XX	RADIO ALTIMETER R/T
KRA-406B	066-1153-0101	RADIO ALTIMETER R/T
KS-270	065-0027-XX	SERVO
KS-270A	065-0059-XX	SERVO
KS-271	065-0028-XX	SERVO

<b>Model</b>	<b>Part number</b>	<b>Description</b>
KS271A	065-0060-XX	SERVO
KS-272	065-0029-XX	SERVO
KS-272A	065-0061-XX	SERVO
KS-273	065-0040-XX	SERVO
KSA-370	065-0014-XX	SERVO
KT-76	066-1034-XX	TRANSPONDER
KT-76A	066-1062-00	TRANSPONDER
KT-78	066-1034-XX	TRANSPONDER
KT-78A	066-1062-XX	TRANSPONDER
KT-79	066-1053-00	TRANSPONDER
KTR-900	064-1003-XX	COMM R/T
KTR-9000	064-1004-XX	COMM R/T
KTR-900A	064-1006-00	COMM R/T
KTR-905/E	064-1009-XX	COMM R/T
KTR-908	064-1023-00	COMM R/T
KTR-9100A	064-1005-XX	COMM R/T
KTR-953	064-1015-00	HF RECEIVER/EXC
KVN-395	066-3022-XX	VNAV COMPUTER
KX -175B	069-1019-XX	NAV/COMM
KX-145	069-1022-00	NAV /COMM
KX-155	069-1024-XX	NAV/COMM
KX-165	069-1025-XX	NAV/COMM
KX-170	069-1014-00	NAV/COMM
KX-170A	069-1017-00	NAV/COMM
KX-170B	069-1020-00	NAV/COMM
KX-175	069-1016-00	NAV/COMM
KXP-750	066-1011-00	TRANSPONDER
KXP-750A	066-1025-XX	TRANSPONDER
KXP-755	066-1041-00	TRANSPONDER



<b>Model</b>	<b>Part number</b>	<b>Description</b>
KXP-756	066-1071-XX	TRANSPONDER
KY-195/B	069-1021-XX	COMM R/T
KY-196/E	064-1019-XX	COMM R/T
KY-196A	064-1054-XX	COMM R/T
KY-197/E	064-1021-XX	COMM R/T
KY-197A	064-1053-XX	COMM R/T
MA-872A	4000976-XXXX	MODE ANNUNCIATOR
MAP-65	622-5799-XXX	MODE ANNUNCIATOR
MKL-350	622-2086-001	MARKER RECEIVER
MKR-350	622-2085-001	MARKER RECEIVER
MKR-351	622-3102-001	MARKER RECEIVER
MS500	4018368-XXX	MODE SELECTOR
MS500A	7004536-XXX	MODE SELECTOR
PA-1050A	46220-XXXX	ACTUATOR
PA-495-X	45850-XXXX	ACTUATOR
PA-500A	35070-XXXX	ACTUATOR
PA-520A	38100-XXXX	TRIM ACTUATOR
PC500	4018639-XXX	AUTOPILOT CONTROLLER
PRIMUS 30	MI-585151-X	RADAR ANTENNA
PRIMUS-10	MI-585101-X	DME R/T
PRIMUS-100	MI-585322-X	RADAR INDICATOR
PRIMUS-150	MI-585439-X	INDICATOR
PRIMUS-150	MI-585438-X	INDICATOR
PRIMUS-20	MI-585147-1	RADAR INDICATOR
PRIMUS-20	MI-585149-X	RADAR R/T
PRIMUS-20	MI-585210-X	RADAR INDICATOR
PRIMUS-20	MI-585157	RADAR ANTENNA
PRIMUS-20	MI-585171	RADAR INDICATOR
PRIMUS-20	MI-585191-2	RADAR INDICATOR

<b>Model</b>	<b>Part number</b>	<b>Description</b>
PRIMUS-20	MI-585148-X	RADAR ANTENNA
PRIMUS-21	MI-585206-X	RADAR INDICATOR
PRIMUS-21	MI-585207	RADAR R/T
PRIMUS-30	MI-585150	RADAR INDICATOR
PRIMUS-30	MI-585232-X	RADAR INDICATOR
PRIMUS-30	MI-585192	RADAR INDICATOR
PRIMUS-31	MI-585205-1	RADAR ANTENNA
PRIMUS-31	MI-585203	RADAR INDICATOR
PRIMUS-31	MI-585204	RADAR R/T
PRIMUS-35	MI-585152	RADAR R/T
PRIMUS-40	MI-585136-1	RADAR ANTENNA
PRIMUS-40	MI-585134-X	RADAR INDICATOR
PRIMUS-40	MI-585135-X	RADAR INDICATOR
PS815( )	4000289-XXXX	POWER SUPPLY
PS-819( )	4000293-XXXX	ADAPTER
PS-823()	501-1075-XX	EMERGENCY POWER SUPPLY
PS-835()	501-1228-XX	EMERGENCY POWER SUPPLY
PT-8705A	4001539-0501	TRANSDUCER
PWC-150	622-2093-001	POWER CONVERTER
RA-210	4004444-901	RADIO ALTIMETER IND
RA-215	4014267-901	RADIO ALTIMETER IND
RA-220	4007339-901	RADIO ALTIMETER IND
RA-230	4007339-902	RADIO ALTIMETER IND
RA-315/335	7000839-XXX	RADIO ALTIMETER IND
RCR-650	622-2091-001	ADF RECEIVER
RCR-650A	622-3587-001	ADF RECEIVER
RMI-30	622-4938-XXX	RMI
RMI-36	622-2506-XXX	RMI
RS 811A	071-1370-00	RADAR ART

<b>Model</b>	<b>Part number</b>	<b>Description</b>
RS-811A	8095536-8101	RADAR ART
RS-811A	071-1378-00	RADAR ART
RT 1301( )	4000966-XXXX	RADAR R/T
RT-1151A	4001921-5101	RADAR R/T
RT-1201A	4000502-0101	RADAR R/T
RT-131A	4000763-3101	RADAR R/T
RT-1401( )	4000831-XXXX	RADAR R/T
RT-18A	400-0033-XXX	FLITE PHONE R/T
RT-18D	400-0125-XXX	FLITEFONE R/T
RT-220	4004437-901	RADIO ALTIMETER R/T
RT-221	4004437-902	RADIO ALTIMETER R/T
RT-300	7001840-XXX	RADIO ALTIMETER R/T
RT-3001	MI-585222	RADAR R/T
RT-3002	MI-585222-X	RADAR R/T
RT-4001	MI-585200-X	RADAR R/T
RT-5001	MI-585300-X	RADAR R/T
RT-5001	MI-585300-X	RADAR R/T
RTA-1001	MI-585255-X	RADAR ART
RTA-1002	MI-585264-X	RADAR ART
RTA-1003	MI-585280-1	RADAR R/T
RTA-1003	MI-585280	RADAR R/T
S-1050A	46260-0000	MODE SELECTOR
S-1050A-1	48110-XXXX	MODE SELECTOR
S-530A	41110-XXXX	MODE SELECTOR
S-550A	42710-0000	MODE SELECTOR
SA-816( )	4000290-XXXX	ROLL SERVO
SA-873( )	4000978-XXXX	ROLL SERVO
SC-833A	4000875-XXXX	SLAVING CONTROL
SD-442B	071-1350-XX	DME CONTROL

<b>Model</b>	<b>Part number</b>	<b>Description</b>
SD-442B	8095263-XXXX	DME INDICATOR
SP200	4008519-920	AUTOPILOT COMPUTER
SP200	4008519-811	AUTOPILOT COMPUTER
SP200	4008519-911	AUTOPILOT COMPUTER
SP200	4008519-841	AUTOPILOT COMPUTER
SP200	4008519-941	AUTOPILOT COMPUTER
SP200	4008519-820	AUTOPILOT COMPUTER
SR-874()	4000980-XXXX	YAW SERVO
ST-873()	4000918-XXXX	TRIM SERVO
TA-495A	44430-2825	TRIM ACTUATOR
TCR-451	622-3670-001	DME R/T
TDR-90	622-1270-001	TRANSPONDER
TDR-950	622-2092-XXX	TRANSPONDER
TDR-950L	622-3004-XXX	TRANSPONDER
TP 114B	6097768-200	TRANSPONDER
TR-2061A	4001057-6601	TRANSPONDER
TR-421B	066-1103-XX	TRANSPONDER
TR-421B	3614009-4201	TRANSPONDER
TR-661A	4000526-XXXX	TRANSPONDERS
TRA-61A	2087827-XXXX	TRANSPONDER
TRA-61AL	2087948-XXXX	TRANSPONDER
VC-401B	064-1047-XX	COMM R/T
VC-401B	3614001-XXXX	COMM R/T
VHF-20	792-6657-001	COMM R/T
VHF-20A	622-1879-XXX	COMM R/T
VHF-20B	622-1314-XXX	COMM R/T
VHF-21A	622-6389-XXX	COMM R/T
VHF-21B	622-6390-XXX	COMM R/T
VHF-22A	622-6152-XXX	COMM R/T

<b>Model</b>	<b>Part number</b>	<b>Description</b>
VHF-22B	622-6153-XXX	COMM R/T
VHF-250	622-2079-XXX	COMM R/T
VHF-250E	622-3365-001	COMM RECEIVER
VHF-250S	622-3364-001	COMM RECEIVER
VHF-251	622-2078-XXX	COMM R/T
VHF-251E	622-3363-XXX	COMM RECEIVER
VHF-251S	622-3307-XXX	COMM RECEIVER
VIR-30A	622-0876-XXX	NAV RECEIVER
VIR-30M	622-0877-XXX	NAV RECEIVER
VIR-31A	622-1239-XXX	NAV RECEIVER
VIR-31H	622-2819-XXX	NAV RECEIVER
VIR-32	622-6137-001	NAV RECEIVER
VIR-350	622-2081-XXX	NAV RECEIVER
VIR-351	622-2080-XXX	NAV RECEIVER
VN-411B	3614004-XXXX	NAV RECEIVER
VN-411B	066-1101-XX	NAV RECEIVER
WH-10	400-0123-XXX	FLITEFONE CONTROL
WH-18	400-0030-XXX	HANDSET
WH-4	400-0093-XXX	CABIN CONTROL
WH-6	400-0122-XXX	FLITEFONE CONTROL
WT-200	400-0044-000	COMM R/T
WT-2000	400-0050-000	COMM R/T
WT-200B	400-0107-XXX	COMM R/T
WXT-150	622-2485-001	RADAR R/T
WXT-200A	622-4021-001	RADAR R/T
WXT-250A	622-4022-001	RADAR R/T
WXT-250B	622-7337-XXX	RADAR R/T
Y-SERIES	321-112-45-000	CONTROL